



## Typical Suburban Street (End View)

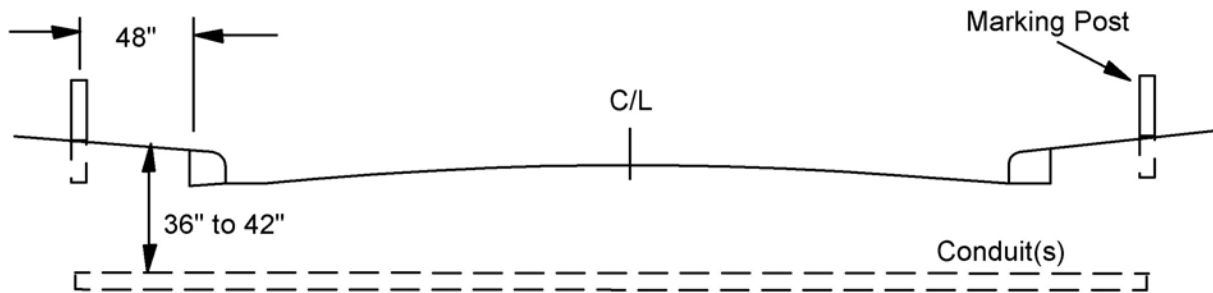

Note: For Multiple Conduits, a 12" Separation is Required.

## Conduit Installation at Intersections

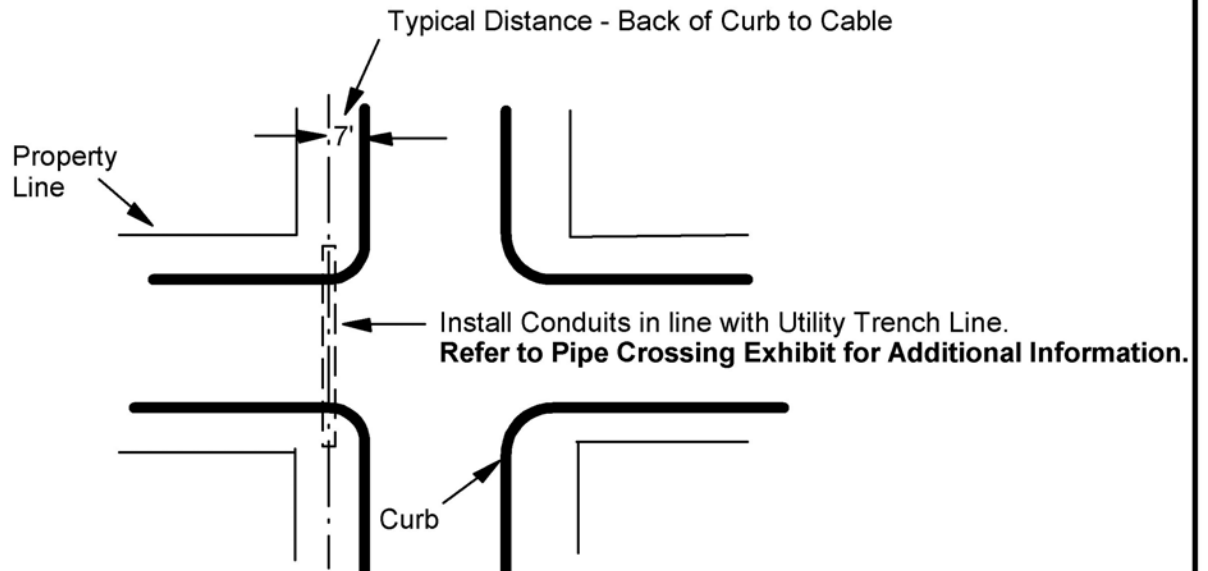

### Requirements:

1. Conduit(s) shall be 4" or 6" PVC unless otherwise noted.
2. Depth of conduit(s) shall be 36" to 42".
3. Extend conduit(s) a min. of 48" beyond curb and mark ends with Marker.
4. If multiple conduits are needed, they shall be separated by 12".
5. At street intersections, install conduit(s) in line with the trench line which is typically 7' from back of curb. This distance can vary due to sidewalk, bikepaths. etc.

## CONDUIT INSTALLATION GUIDE SUBURBAN STREETS

FEB 2006

**CONNEXUS  
ENERGY**

UX40